

Diagram 2 - BX and BX 14 models from October 1988 - circuit VI

Key to Diagram 2

For colour code and other information, see key to Diagram 1

| | The state of the s | No | it Location | No | Description | No | Location |
|--------|--|------|-------------|-----|------------------------------|-------|------------|
| | Front cigar lighter/Illumination | VII | 25 to 25 | 263 | Front wash/wipe switch | II | 18 to 22 |
| 5 | Ignition distributor | IV | 71011 | 278 | Blower motor speed control | VII | 8 to 12 |
| 10 | Alternator | 80 | 1 to 6 | 285 | Ignition cell capacitor | IV | 1 |
| 25 | Hom | 200 | 21 | 300 | Starter motor | 11 | 3 to 5 |
| 45 | Battery | 77 | 2 | 370 | Boot or interior light | VIII | 26 |
| 46 | I CONTROL OF THE CONT | 60 | 13 to 15 | 385 | LH rear number plate light | 16 | 19 |
| 11000 | Instrument panel | iv | 4 10 6 | 386 | RH rear number plate light | ii ii | 18 |
| 46 | Instrument panel | 6.4 | | | | v | 10 to 11 |
| 46 | Instrument panel | V | 1 to 26 | 430 | LH front brake caliper | | |
| 50 | Ignition coil | IV | 3 to 5 | 431 | RiH front brake caliper | V | 12 to 13 |
| 75 | Ignition module | IV | 5 to 8 | 440 | LH front sidelight | 11 | 16 |
| 84 | Coolant level indicator unit | V | 6 to 8 | 441 | RH front sidelight | | 17 |
| 90 | Door locking control unit | VIII | 17 to 25 | 442 | LH rear light | | 20 |
| 145 | Direction indicator unit (C) | VI | B to 9 | 443 | RH rear light | 11 | 21 |
| 168 | Battery connector | 100 | 2 to 3 | 457 | LH stop-light | VI | 13 |
| 170 | Boot light switch | VIII | 26 | 458 | RH stop-light | VI | 14 |
| 180 | Reversing light switch | VI | 11 | 460 | LH rear foglight | III | 11 |
| 185 | Stop-light switch | VI | 13 | 461 | RH rear foglight | 100 | 12 |
| 190 | Handbrake switch | V | 10 | 462 | LH reversing light | VI | 11 |
| 225 | Choke warning light switch | V | 12 | 463 | RH reversing light | VI | 12 |
| 229 | Ignition switch | t | 4 to 36 | 470 | Fuses | 1 | 23, 24, |
| 230 | LH front door switch | VIII | 1.1 | | | | 35, 39 |
| 231 | RH front door switch | VIII | 13 | 470 | Fuses: | 11 | 15, 20, 21 |
| 235 | Hydraulic fluid flow pressure | | | 470 | Fuses | 100 | 11, 19 |
| 100000 | switch | V | 8 | 470 | Fuse F5 | VI | 8 |
| 236 | Hydraulic fluid level switch | V | 9 | 470 | Fuse F4, F9 | VII | 1, 19 |
| 237 | Coolant level switch | V | 6 to 7 | 480 | LH front direction indicator | VI | 7 |
| 260 | Lighting/direction indicator/horn | | | 481 | RH front direction indicator | VI | 8 |
| 100 | switch | 11 | 9 to 13 | 482 | LH rear direction indicator | VI | 8 |
| 260 | Lighting/direction indicator/horn | (7) | 10.10 | 483 | RH rear direction indicator | VI | 10 |
| 2.00 | switch | 111 | 21 | 488 | LH headlight | 0 | 9 to 10 |
| 260 | Lighting/direction indicator/horn | *** | sounds. | 489 | RH headlight | 11 | 11 to 12 |
| 200 | switch | IV | 7 to 8 | 500 | LH front loudspeaker | VII | 29 to 30 |